

Description

The Arduino® UNO R4 WiFi is the first UNO board to feature a 32-bit microcontroller and an ESP32-S3 Wi-Fi® module (ESP32-S3-MINI-1-N8). It features a RA4M1 series microcontroller from Renesas (R7FA4M1AB3CFM#AA0), based on a 48 MHz Arm® Cortex®-M4 microprocessor. The UNO R4 WiFi's memory is larger than its predecessors, with 256 kB flash, 32 kB SRAM and 8 kB of EEPROM.

The RA4M1's operating voltage is fixed at 5 V, whereas the ESP32-S3 module is 3.3 V. Communication between these two MCUs is performed via a logic-level translator (TXB0108DQSR).

Target areas:

Maker, beginner, education

Features

The **R7FA4M1AB3CFM#AA0**, often referred to as RA4M1 in this datasheet, is the main MCU on the UNO R4 WiFi, connected to all pin headers on the board as well as all communication buses.

■ Overview

- 48 MHz Arm® Cortex®-M4 microprocessor with a floating point unit (FPU)
- 5 V operating voltage
- Real-time Clock (RTC)
- Memory Protection Unit (MPU)
- Digital-to-analog Converter (DAC)

■ Memory

- 256 kB Flash Memory
- 32 kB SRAM
- 8 kB Data Memory (EEPROM)

■ Peripherals

- Capacitive Touch Sensing Unit (CTSU)
- USB 2.0 Full-Speed Module (USBFS)
- 14-bit ADC
- Up to 12-bit DAC
- Operational Amplifier (OPAMP)

■ Power

- Operating voltage for RA4M1 is 5 V
- Recommended input voltage (VIN) is 6-24 V
- Barrel jack connected to VIN pin (6-24 V)
- Power via USB-C® at 5 V

■ Communication

- 1x UART (pin D0, D1)
- 1x SPI (pin D10-D13, ICSP header)
- 1x I2C (pin A4, A5, SDA, SCL)
- 1x CAN (pin D4, D5, external transceiver is required)

See the full datasheet for the R7FA4M1AB3CFM#AA0 in the link below:

- [R7FA4M1AB3CFM#AA0 datasheet](#)

The **ESP32-S3-MINI-1-N8** is the secondary MCU with a built-in antenna for Wi-Fi® & Bluetooth® connectivity. This module operates on 3.3 V and communicates with the RA4M1 using a logic-level translator (TXB0108DQSR).

■ Overview

- Xtensa® dual-core 32-bit LX7 microprocessor
- 3.3 V operating voltage
- 40 MHz crystal oscillator



- **Wi-Fi®**
 - Wi-Fi® support with 802.11 b/g/n standard (Wi-Fi® 4)
 - Bit rate at up to 150 Mbps
 - 2.4 GHz band
- **Bluetooth®**
 - Bluetooth® 5

See the full datasheet for the ESP32-S3-MINI-1-N8 in the link below:

- [ESP32-S3-MINI-1-N8 datasheet](#)



CONTENTS

1 The Board	7
1.1 Application Examples	7
1.2 Related Products	7
2 Recommended Operating Conditions	8
3 Block Diagram	8
4 Board Topology	9
4.1 Front View	9
5 Microcontroller (R7FA4M1AB3CFM#AA0)	10
6 Wi-Fi® / Bluetooth® Module (ESP32-S3-MINI-1-N8)	10
6.1 ESP Header	11
6.2 USB Bridge	12
7 USB Connector	13
8 LED Matrix	13
9 Digital Analog Converter (DAC)	14
10 I2C Connector	15
11 Power Options	16
11.1 Power Tree	16
11.2 Pin Voltage	17
11.3 Pin Current	17
12 Pinout	18
12.1 Analog	19
12.2 Digital	19
12.3 OFF	20
12.4 ICSP	20
13 Mounting Holes And Board Outline	20
14 Board Operation	21
14.1 Getting Started - IDE	21
14.2 Getting Started - Arduino Web Editor	21
14.3 Getting Started - Arduino Cloud	21
14.4 Online Resources	21
14.5 Board Recovery	21
15 Declaration of Conformity CE DoC (EU)	22
16 Declaration of Conformity to EU RoHS & REACH 211 01/19/2021	



17 Conflict Minerals Declaration	23
18 FCC Caution	23
19 SRRC	24
20 Company Information	24
21 Reference Documentation	25
22 Change Log	25
23 简介	
23.1 概述	
23.1.1 产品概述	
24 开发环境	
25 引脚	
26 接口	
26.1 串口	
27 固件 (R7FA4M1AB3CFM#AA0)	
28 Wi-Fi® / 蓝牙® ESP32-S3-MINI-1-N8	
28.1 ESP 模块	
28.2 USB 接口	
29 USB 接口	
30 LED 接口	
31 温度传感器 (DAC)	
32 I2C 接口	
33 接口	
33.1 接口	
33.2 接口	
33.3 接口	
34 接口	
34.1 接口	
34.2 接口	
34.3 接口	
34.4 ICSP	41
35 接口	
36 接口	
36.1 接口 - IDE	
36.2 接口 - Arduino Web Editor	
36.3 接口 - Arduino Cloud	
36.4 接口	



36.5

37 CE DoC EU

38 EU RoHS & REACH 211 01/19/2021

39

40 FCC

41 SRRC

45

42

43

44



1 The Board

1.1 Application Examples

The UNO R4 WiFi is part of the first UNO series of 32-bit development boards, being previously based on 8-bit AVR microcontrollers. There are thousands of guides, tutorials and books written about the UNO board, where the UNO R4 WiFi continues its legacy.

The board features 14 digital I/O ports, 6 analog channels, dedicated pins for I2C, SPI and UART connections. It has a significantly larger memory: 8 times more flash memory (256 kB) and 16 times more SRAM (32 kB). With a 48 MHz clock speed, it is also 3x faster than its predecessors.

In addition, it features an ESP32-S3 module for Wi-Fi® & Bluetooth® connectivity, as well as a built-in 12x8 LED matrix, making it one of the most visually unique Arduino boards to date. The LED matrix is fully programmable, where you can load anything from still frames to custom animations.

Entry-level projects: If this is your first project within coding and electronics, the UNO R4 WiFi is a good fit. It is easy to get started with, and it has a lot of online documentation.

Easy IoT applications: build projects without writing any networking code in the Arduino Cloud. Monitor your board, connect it with other boards and services, and develop cool IoT projects.

LED Matrix: the 12x8 LED matrix on the board can be used for showing animations, text scrolling, create mini-games and much more, being the perfect feature to give your project more personality.

1.2 Related Products

- UNO R3
- UNO R3 SMD
- UNO R4 Minima

Rating

2 Recommended Operating Conditions

Symbol	Description	Min	Typ	Max	Unit
V_{IN}	Input voltage from VIN pad / DC Jack	6	7.0	24	V
V_{USB}	Input voltage from USB connector	4.8	5.0	5.5	V
T_{OP}	Operating Temperature	-40	25	85	°C

Note: V_{DD} controls the logic level and is connected to the 5V power rail. V_{AREF} is for the analog logic.

Functional Overview

3 Block Diagram



Arduino R4 WiFi Block Diagram

4 Board Topology

4.1 Front View



Top View of Arduino UNO R4 WiFi

Ref.	Description
U1	R7FA4M1AB3CFM#AA0 Microcontroller IC
U2	NLASB3157DFT2G Multiplexer
U3	ISL854102FRZ-T Buck Converter
U4	TXB0108DQSR logic level translator (5 V - 3.3 V)
U5	SGM2205-3.3XKC3G/TR 3.3 V linear regulator
U6	NLASB3157DFT2G Multiplexer
U_LEDMATRIX	12x8 LED Red Matrix
M1	ESP32-S3-MINI-1-N8
PB1	RESET Button
JANALOG	Analog input/output headers
JDIGITAL	Digital input/output headers
JOFF	OFF, VRTC header
J1	CX90B-16P USB-C® connector
J2	SM04B-SRSS-TB(LF)(SN) I2C connector
J3	ICSP header (SPI)
J5	DC Jack
J6	ESP header
DL1	LED TX (serial transmit)

Ref.	Description
DL2	LED RX (serial receive)
DL3	LED Power (green)
DL4	LED SCK (serial clock)
D1	PMEG6020AELRX Schottky Diode
D2	PMEG6020AELRX Schottky Diode
D3	PRTR5V0U2X,215 ESD Protection

5 Microcontroller (R7FA4M1AB3CFM#AA0)

The UNO R4 WiFi is based on the 32-bit RA4M1 series microcontroller, **R7FA4M1AB3CFM#AA0**, from Renesas, which uses a 48 MHz Arm® Cortex®-M4 microprocessor with a floating point unit (FPU).

The operating voltage for the RA4M1 is fixed at 5 V as to be hardware compatible with shields, accessories & circuits based on previous Arduino UNO boards.

The R7FA4M1AB3CFM#AA0 features:

- 256 kB flash / 32 kB SRAM / 8 kB data flash (EEPROM)
- Real-time Clock (RTC)
- 4x Direct Memory Access Controller (DMAC)
- 14-bit ADC
- Up to 12-bit DAC
- OPAMP
- CAN bus

For more technical details on this microcontroller, visit the Renesas - RA4M1 series official documentation.

6 Wi-Fi® / Bluetooth® Module (ESP32-S3-MINI-1-N8)

The Wi-Fi® / Bluetooth® LE module on the UNO R4 WiFi is from the ESP32-S3 SoCs. It features the Xtensa® dual-core 32-bit LX7 MCU, a built-in antenna and support for 2.4 GHz bands.

The ESP32-S3-MINI-1-N8 features:

- Wi-Fi® 4 - 2.4 GHz band
- Bluetooth® 5 LE support
- 3.3 V operating voltage
- 384 kB ROM
- 512 kB SRAM
- Up to 150 Mbps bit rate

This module acts as a secondary MCU on the UNO R4 WiFi, and communicates with the RA4M1 MCU using a logic-level translator. Note that this module operates on 3.3 V as opposed to the RA4M1's 5 V operating voltage.

6.1 ESP Header



ESP header.

The header located close to the RESET button can be used to access the ESP32-S3 module directly. The pins accessible are:

- ESP_I042 - MTMS debugging (Pin 1)
- ESP_I041 - MTDI debugging (Pin 2)
- ESP_TXD0 - Serial Transmit (UART) (Pin 3)
- ESP_DOWNLOAD - boot (Pin 4)
- ESP_RXD0 - Serial Receive (UART) (Pin 5)
- GND - ground (Pin 6)

ESP HEADER



ESP header (schematic)

6.2 USB Bridge

When programming the UNO R4 WiFi, the RA4M1 MCU is programmed via the ESP32-S3 module by default. The **U2** and **U6** switches can switch the USB communication to go directly to the RA4M1 MCU, by writing a high state to the P408 pin (D40).



Soldering together the **SJ1** pads permanently sets the USB communication directly to the RA4M1, bypassing the ESP32-S3.

7 USB Connector

The UNO R4 WiFi has one USB-C® port, used to power and program your board as well as sending & receiving serial communication.


Note: The board should not be powered with more than 5 V via the USB-C® port.

8 LED Matrix

The UNO R4 WiFi features a 12x8 matrix of red LEDs (**U_LEDMATRIX**), connected using the technique known as charlieplexing.

The following pins on the RA4M1 MCU are used for the matrix:

- P003
- P004
- P011
- P012
- P013
- P015
- P204
- P205
- P206
- P212
- P213

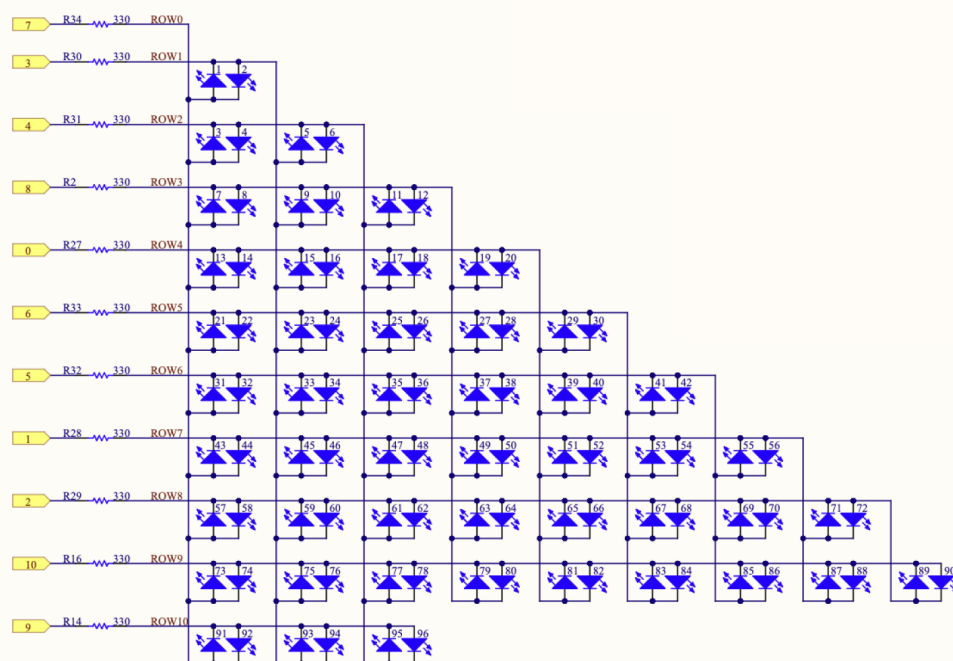

LED matrix schematics.

These LEDs can be accessed as an array, using a specific library. See the mapping below:



LED matrix number mapping.

This matrix can be used for a number of projects and prototyping purposes, and supports animation, simple game designs and scrolling text among other things.


9 Digital Analog Converter (DAC)

The UNO R4 WiFi has a DAC with up to 12-bit resolution attached to the A0 analog pin. A DAC is used to convert a digital signal to an analog signal.

The DAC can be used for signal generation for e.g. audio applications, like generating and altering sawtooth waves.

10 I2C Connector

The I2C connector SM04B-SRSS-TB(LF)(SN) is connected to a secondary I2C bus on the board. Note that this connector is powered via 3.3 V.

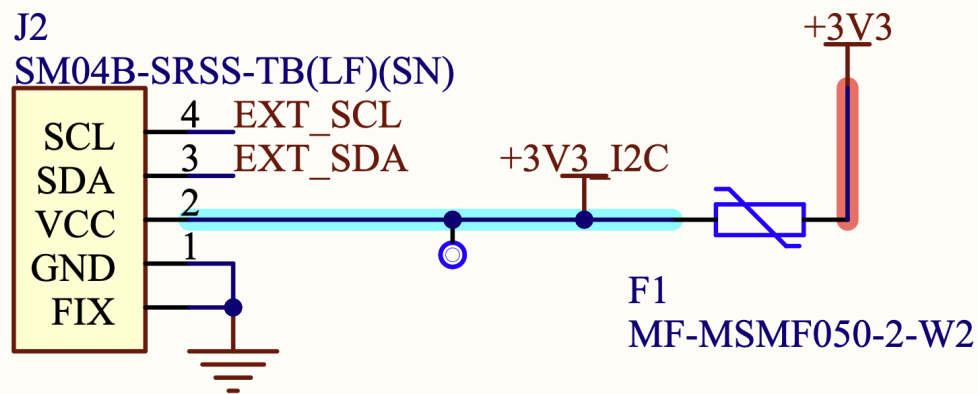

I2C connector.

This connector also shares the following pin connections:

JANALOG header

- A4
- A5

JDIGITAL header

- SDA
- SCL

Note: as A4/A5 is connected to the main I2C bus, these should not be used as ADC inputs whenever the bus is in use. You can however connect I2C devices to each of these pins and connectors simultaneously.

11 Power Options

Power can either be supplied via the VIN pin, or via USB-C® connector. If power is supplied via VIN, the ISL854102FRZ buck converter steps the voltage down to 5 V.

Both VUSB and VIN pins are connected to the ISL854102FRZ buck converter, with Schottky diodes in place for reverse polarity & overvoltage protection respectively.

Power via USB supplies about ~4.7 V (due to Schottky drop) to the RA4M1 MCU.

The linear regulator (SGM2205-3.3XKC3G/TR) converts 5 V from either the buck converter or USB, and provides 3.3 V to a number of components, including the ESP32-S3 module.

11.1 Power Tree



Arduino UNO R4 WiFi power tree.



11.2 Pin Voltage

The general operating voltage for UNO R4 WiFi is 5 V, however the ESP32-S3 module's operating voltage is 3.3 V.

Note: It is **very** important that ESP32-S3's pins (3.3 V) do not come in contact with any of the RA4M1's pins (5 V), as this may damage the circuits.

11.3 Pin Current

The GPIOs on the R7FA4M1AB3CFM#AA0 microcontroller can safely handle up to 8 mA of current. Never connect devices that draw higher current directly to a GPIO as this may damage the circuit.

For powering e.g. servo motors, always use an external power supply.

Mechanical Information

12 Pinout



Legend:	■ Digital	■ I2C	■ Other SERIAL
■ Power	■ Analog	■ SPI	■ Analog
■ Ground	■ Main Part	■ UART/USART	■ PWM/Timer



UNO R4 WiFi
SKU code: ABX00087
Pinout
Last update: 30 Jun, 2023

Pinout for UNO R4 WiFi.

12.1 Analog

Pin	Function	Type	Description
1	BOOT	NC	Not Connected
2	IOREF	IOREF	Reference for digital logic V - connected to 5 V
3	Reset	Reset	Reset
4	+3V3	Power	+3V3 Power Rail
5	+5V	Power	+5V Power Rail
6	GND	Power	Ground
7	GND	Power	Ground
8	VIN	Power	Voltage Input
9	A0	Analog	Analog input 0 / DAC
10	A1	Analog	Analog input 1 / OPAMP+
11	A2	Analog	Analog input 2 / OPAMP-
12	A3	Analog	Analog input 3 / OPAMPOut
13	A4	Analog	Analog input 4 / I2C Serial Datal (SDA)
14	A5	Analog	Analog input 5 / I2C Serial Clock (SCL)

12.2 Digital

Pin	Function	Type	Description
1	SCL	Digital	I2C Serial Clock (SCL)
2	SDA	Digital	I2C Serial Datal (SDA)
3	AREF	Digital	Analog Reference Voltage
4	GND	Power	Ground
5	D13/SCK/CANRX0	Digital	GPIO 13 / SPI Clock / CAN Receiver (RX)
6	D12/CIPO	Digital	GPIO 12 / SPI Controller In Peripheral Out
7	D11/COPI	Digital	GPIO 11 (PWM) / SPI Controller Out Peripheral In
8	D10/CS/CANTX0	Digital	GPIO 10 (PWM) / SPI Chip Select / CAN Transmitter (TX)
9	D9	Digital	GPIO 9 (PWM~)
10	D8	Digital	GPIO 8
11	D7	Digital	GPIO 7
12	D6	Digital	GPIO 6 (PWM~)
13	D5	Digital	GPIO 5 (PWM~)
14	D4	Digital	GPIO 4
15	D3	Digital	GPIO 3 (PWM~) / Interrupt Pin
16	D2	Digital	GPIO 2 / Interrupt Pin
17	D1/TX0	Digital	GPIO 1 / Serial 0 Transmitter (TX)
18	D0/TX0	Digital	GPIO 0 / Serial 0 Receiver (RX)

12.3 OFF

Pin	Function	Type	Description
1	OFF	Power	For controlling power supply
2	GND	Power	Ground
1	VRTC	Power	Battery connection to power RTC only

12.4 ICSP

Pin	Function	Type	Description
1	CIPO	Internal	Controller In Peripheral Out
2	+5V	Internal	Power Supply of 5 V
3	SCK	Internal	Serial Clock
4	COPI	Internal	Controller Out Peripheral In
5	RESET	Internal	Reset
6	GND	Internal	Ground

13 Mounting Holes And Board Outline



Top side Mechanical View of Arduino UNO R4 WiFi



14 Board Operation

14.1 Getting Started - IDE

If you want to program your UNO R4 WiFi while offline you need to install the Arduino® Desktop IDE **[1]**. To connect the UNO R4 WiFi to your computer, you will need a Type-C® USB cable, which can also provide power to the board, as indicated by the LED (DL1).

14.2 Getting Started - Arduino Web Editor

All Arduino boards, including this one, work out-of-the-box on the Arduino® Web Editor **[2]**, by just installing a simple plugin.

The Arduino Web Editor is hosted online, therefore it will always be up-to-date with the latest features and support for all boards. Follow **[3]** to start coding on the browser and upload your sketches onto your board.

14.3 Getting Started - Arduino Cloud

All Arduino IoT enabled products are supported on Arduino Cloud which allows you to log, graph and analyze sensor data, trigger events, and automate your home or business.

14.4 Online Resources

Now that you have gone through the basics of what you can do with the board you can explore the endless possibilities it provides by checking existing projects on Arduino Project Hub **[4]**, the Arduino Library Reference **[5]**, and the online store **[6]**; where you will be able to complement your board with sensors, actuators and more.

14.5 Board Recovery

All Arduino boards have a built-in bootloader which allows flashing the board via USB. In case a sketch locks up the processor and the board is not reachable anymore via USB, it is possible to enter bootloader mode by double-tapping the reset button right after the power-up.



Certifications

15 Declaration of Conformity CE DoC (EU)

We declare under our sole responsibility that the products above are in conformity with the essential requirements of the following EU Directives and therefore qualify for free movement within markets comprising the European Union (EU) and European Economic Area (EEA).

16 Declaration of Conformity to EU RoHS & REACH 211 01/19/2021

Arduino boards are in compliance with RoHS 2 Directive 2011/65/EU of the European Parliament and RoHS 3 Directive 2015/863/EU of the Council of 4 June 2015 on the restriction of the use of certain hazardous substances in electrical and electronic equipment.

Substance	Maximum Limit (ppm)
Lead (Pb)	1000
Cadmium (Cd)	100
Mercury (Hg)	1000
Hexavalent Chromium (Cr6+)	1000
Poly Brominated Biphenyls (PBB)	1000
Poly Brominated Diphenyl ethers (PBDE)	1000
Bis(2-Ethylhexyl} phthalate (DEHP)	1000
Benzyl butyl phthalate (BBP)	1000
Dibutyl phthalate (DBP)	1000
Diisobutyl phthalate (DIBP)	1000

Exemptions : No exemptions are claimed.

Arduino Boards are fully compliant with the related requirements of European Union Regulation (EC) 1907 /2006 concerning the Registration, Evaluation, Authorization and Restriction of Chemicals (REACH). We declare none of the SVHCs (<https://echa.europa.eu/web/guest/candidate-list-table>), the Candidate List of Substances of Very High Concern for authorization currently released by ECHA, is present in all products (and also package) in quantities totaling in a concentration equal or above 0.1%. To the best of our knowledge, we also declare that our products do not contain any of the substances listed on the "Authorization List" (Annex XIV of the REACH regulations) and Substances of Very High Concern (SVHC) in any significant amounts as specified by the Annex XVII of Candidate list published by ECHA (European Chemical Agency) 1907 /2006/EC.

17 Conflict Minerals Declaration

As a global supplier of electronic and electrical components, Arduino is aware of our obligations with regards to laws and regulations regarding Conflict Minerals, specifically the Dodd-Frank Wall Street Reform and Consumer Protection Act, Section 1502. Arduino does not directly source or process conflict minerals such as Tin, Tantalum, Tungsten, or Gold. Conflict minerals are contained in our products in the form of solder, or as a component in metal alloys. As part of our reasonable due diligence Arduino has contacted component suppliers within our supply chain to verify their continued compliance with the regulations. Based on the information received thus far we declare that our products contain Conflict Minerals sourced from conflict-free areas.

18 FCC Caution

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference
- (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC RF Radiation Exposure Statement:

1. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
2. This equipment complies with RF radiation exposure limits set forth for an uncontrolled environment.
3. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator & your body.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

English: User manuals for licence-exempt radio apparatus shall contain the following or equivalent notice in a conspicuous location in the user manual or alternatively on the device or both. This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference



(2) this device must accept any interference, including interference that may cause undesired operation of the device.

French: Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

(1) l'appareil n' doit pas produire de brouillage

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

IC SAR Warning:

English This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.

French: Lors de l' installation et de l' exploitation de ce dispositif, la distance entre le radiateur et le corps est d' au moins 20 cm.

Important: The operating temperature of the EUT can't exceed 85 °C and shouldn't be lower than -40 °C.

Hereby, Arduino S.r.l. declares that this product is in compliance with essential requirements and other relevant provisions of Directive 2014/53/EU. This product is allowed to be used in all EU member states.

19 SRRC

This equipment contains a radio transmitter module with model approval code: CMIIT ID: 2022DP6085.

20 Company Information

Company name	Arduino SRL
Company Address	Via Andrea Appiani, 25 - 20900 MONZA (Italy)



21 Reference Documentation

Ref	Link
Arduino IDE (Desktop)	https://www.arduino.cc/en/Main/Software
Arduino IDE (Cloud)	https://create.arduino.cc/editor
Cloud IDE Getting Started	https://docs.arduino.cc/cloud/web-editor/tutorials/getting-started/getting-started-web-editor
Project Hub	https://create.arduino.cc/projecthub?by=part&part_id=11332&sort=trending
Library Reference	https://github.com/arduino-libraries/
Online Store	https://store.arduino.cc/

22 Change Log

Date	Revision	Changes
19/09/2023	4	Update FCC section
25/07/2023	3	Update Pin Table
30/06/2023	2	Update Pinout File
08/06/2023	1	First Release

(ZH)

Arduino® UNO R4 WiFi 是一款基于 ESP32-S3 Wi-Fi® 模块 (ESP32-S3-MINI-1-N8) 的 UNO 兼容开发板。它搭载了 Renesas RA4M1 微控制器 (R7FA4M1AB3CFM#AA0)，主频为 48 MHz，采用 Arm® Cortex®-M4 内核。该开发板还配备了 256 kB 闪存、32 kB SRAM 和 8 kB EEPROM。它支持 5V 供电，并带有 ESP32-S3 的 3.3V 逻辑电平。MCU 模块为 TXB0108DQSR。

R7FA4M1AB3CFM#AA0 RA4M1, UNO R4 WiFi MCU

- 00000000 R7FA4M1AB3CFM#AA0 00000000

- ESP32-S3-MINI-1-N8** 32-bit MCU, Wi-Fi®, Bluetooth®, 3.3V, TXB0108DQSR, RA4M1

- 110

- Xtensa® ESP32-LX7
- 3.3V
- 40 MHz
- **Wi-Fi®**
 - 802.11 b/g/n Wi-Fi® Wi-Fi® 4
 - 150 Mbps
 - 2.4
- **Bluetooth®**
 - Bluetooth® 5

ESP32-S3-MINI-1-N8

- ESP32-S3-MINI-1-N8

23

23.1

UNO R4 WiFi ESP32, AVR UNO R4 WiFi

14 I/O 6 I2C SPI UART 256 kB 8 SRAM 32 kB 16 MHz 48 MHz 3

ESP32-S3 Wi-Fi® Bluetooth® 12x8 LED Arduino LED

UNO R4 WiFi

Arduino

LED 12x8 LED



23.1.1

- UNO R3
- UNO R3 SMD
- UNO R4 Minima

24

項目	項目	最小値	標準値	最大値	単位
V _{IN}	VIN 端子 / DC 入力端子	6	7.0	24	V
V _{USB}	USB 入力端子	4.8	5.0	5.5	V
T _{OP}	動作温度	-40	25	85	°C

※ V_{DD} は V_{REF} (5V) に対して V_{DD} = V_{REF} となるように設定してください。


25



Arduino R4 WiFi

26

26.1

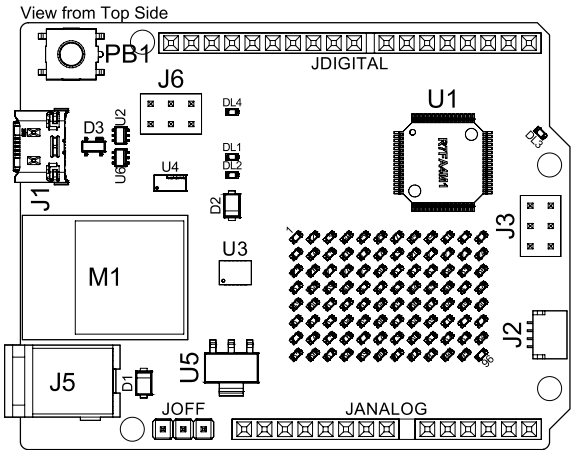

Arduino UNO R4 WiFi 〇〇〇〇

〇〇	〇〇
U1	R7FA4M1AB3CFM#AA0 〇〇〇〇 IC
U2	NLASB3157DFT2G 〇〇〇〇〇
U3	ISL854102FRZ-T 〇〇〇〇〇
U4	TXB0108DQSR 〇〇〇〇〇〇〇〇5 V - 3.3 V〇
U5	SGM2205-3.3XKC3G/TR 3.3 V 〇〇〇〇〇
U6	NLASB3157DFT2G 〇〇〇〇〇
U_LEDMATRIX	12x8 LED 〇〇〇〇
M1	ESP32-S3-MINI-1-N8
PB1	RESET 〇〇〇〇
JANALOG	〇〇〇〇/〇〇〇〇
JDIGITAL	〇〇〇〇/〇〇〇〇
JOFF	OFF, VRTC 〇〇
J1	CX90B-16P USB-C® 〇〇〇
J2	SM04B-SRSS-TB(LF)(SN) I2C 〇〇〇
J3	ICSP 〇〇〇SPI〇
J5	〇〇〇〇〇〇
J6	ESP 〇〇
DL1	LED TX〇〇〇〇〇〇



ピン	部品
DL2	LED RX
DL3	LED
DL4	LED SCK
D1	PMEG6020AELRX
D2	PMEG6020AELRX
D3	PRTR5V0U2X,215 ESD

27 (R7FA4M1AB3CFM#AA0)

UNO R4 WiFi はRenesas 32bit RA4M1 マイコンチップ R7FA4M1AB3CFM#AA0 を搭載し、48 MHz Arm® Cortex®-M4 を搭載し、FPU を搭載しています。

RA4M1 は 5V を供給する Arduino UNO と互換性があります。

R7FA4M1AB3CFM#AA0 は、

- 256kB / 32kB SRAM / 8kB EEPROM
- RTC (RTC)
- 4x DMA (DMAC)
- 14 ADC
- 12 DAC
- UART
- CAN

また、Renesas-RA4M1 は、

28 Wi-Fi® / ESP32-S3-MINI-1-N8


UNO R4 WiFi は Wi-Fi® / LE 対応 ESP32-S3 SoC を搭載し、Xtensa® 32bit LX7 MCU を搭載し、2.4 GHz をサポートしています。

ESP32-S3-MINI-1-N8 は、

- Wi-Fi® 4 - 2.4 GHz
- Bluetooth® 5 LE
- 3.3V
- 384kB ROM
- 512kB SRAM
- 150 Mbps

また、UNO R4 WiFi は MCU を搭載し、RA4M1 MCU を搭載し、3.3V を供給し、RA4M1 5V を供給しています。

28.1 ESP

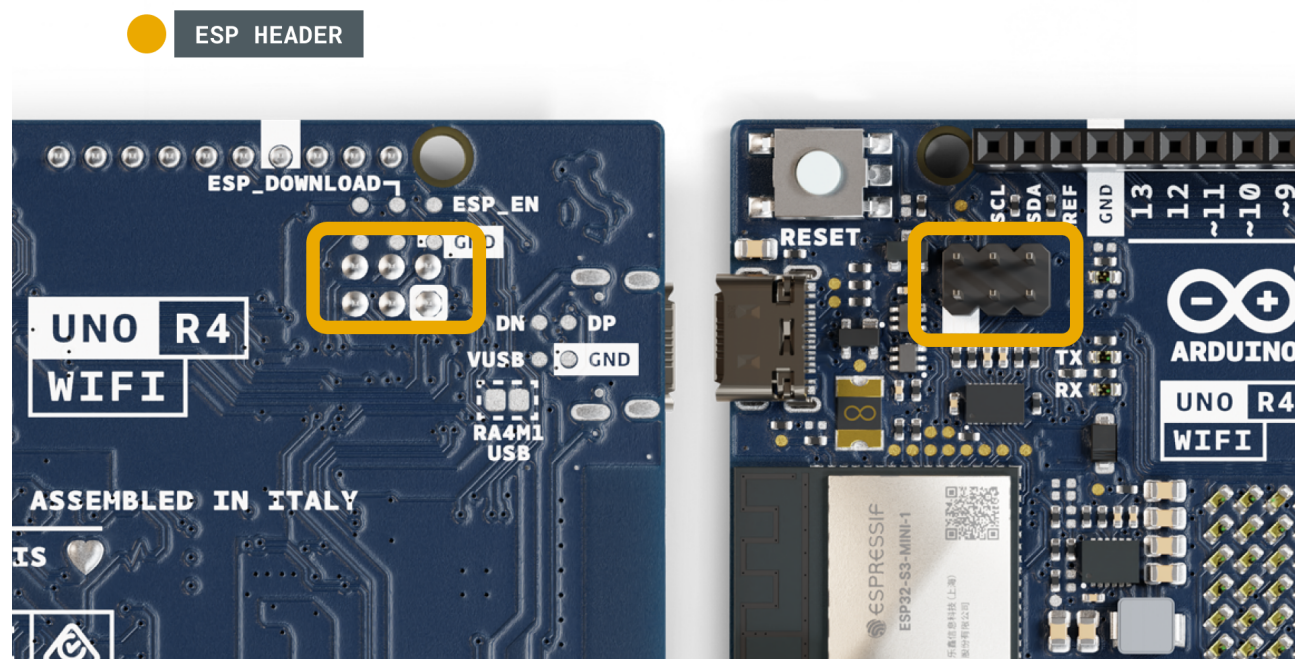


ESP.

RESET ESP32-S3

- ESP_I042 - MTMS 1
- ESP_I041 - MTDI 2
- ESP_TXD0 - UART 3
- ESP_DOWNLOAD - 4
- ESP_RXD0 - UART 5
- GND - 6


ESP HEADER

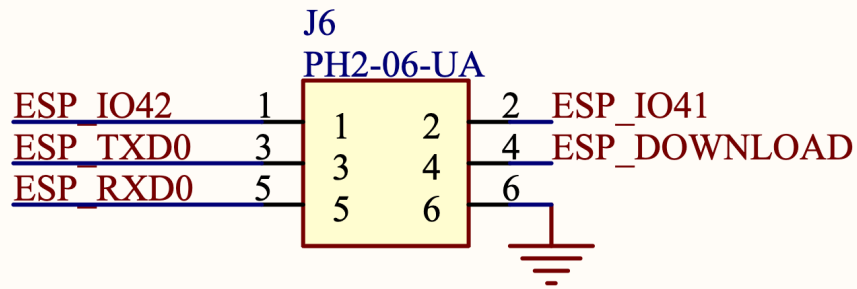

ESP 000000

28.2 USB

UNO R4 WiFi 000000RA4M1 MCU 0000ESP32-S3 000000000000"P408 "00(D40) 0000000000U2 0 U6 0000USB 0000000000RA4M1 MCU 0

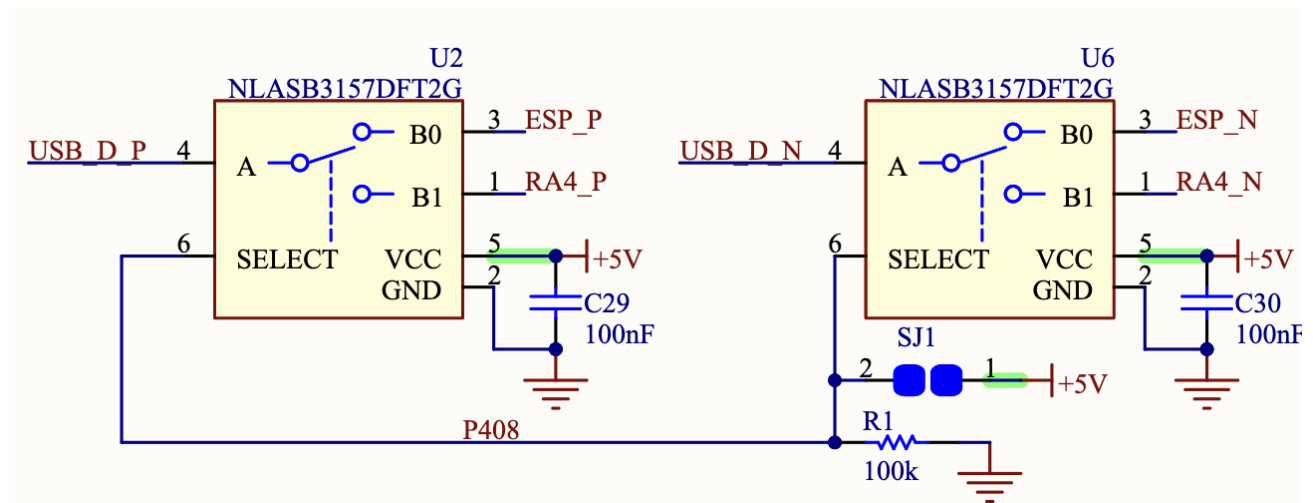

0SJ1 0000000000000000USB 0000000000RA4M1 0000ESP32-S3 0

29 USB

UNO R4 WiFiのUSB-C® 接続端子のピン配置図


このUSB-C® 接続端子は5Vの電源を提供します。

30 LED

UNO R4 WiFiの12x8のLEDマトリクス(U_LEDMATRIX)のピン配置図


RA4M1 MCUのピン配置図

- P003
- P004
- P011
- P012
- P013
- P015
- P204
- P205
- P206
- P212
- P213

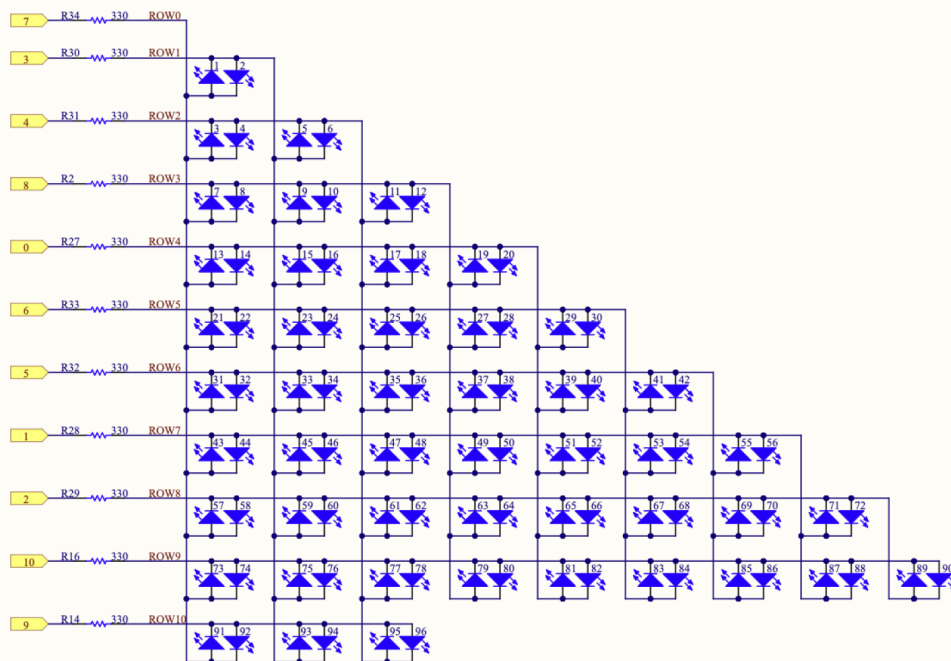

LEDの接続図

このLEDマトリクスは12x8のLEDマトリクスです。

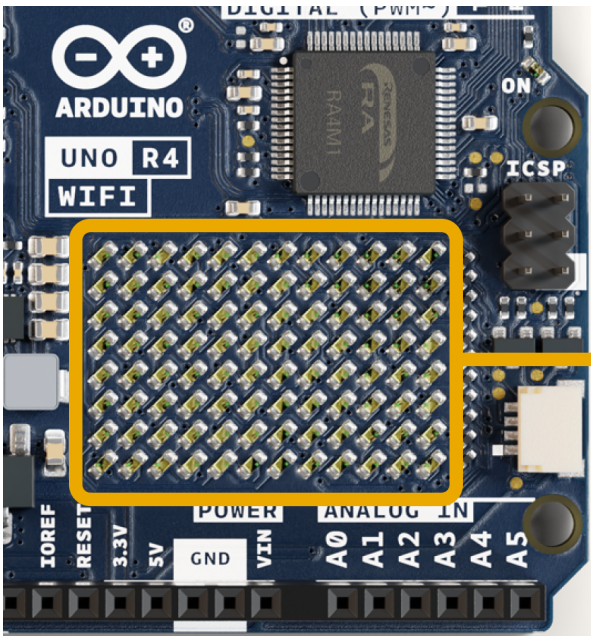

1	2	3	4	5	6	7	8	9	10	11	12
13	14	15	16	17	18	19	20	21	22	23	24
25	26	27	28	29	30	31	32	33	34	35	36
37	38	39	40	41	42	43	44	45	46	47	48
49	50	51	52	53	54	55	56	57	58	59	60
61	62	63	64	65	66	67	68	69	70	71	72
73	74	75	76	77	78	79	80	81	82	83	84
85	86	87	88	89	90	91	92	93	94	95	96

LED

31 (DAC)

UNO R4 WiFiA012DACDAC

DAC

I2C□□SM04B-SRSS-TB(LF)(SN)□□□□□□□□□□I2C□□□□□□□□□□3.3V□□



JANALOG 〇〇

- JDIGITAL 〇〇

0000 00A4/A50000 I2C000000000000000000000000 ADC000000000000 I2C0000000000000000

33


Power is supplied to the board via the USB-C connector (J1) and the power jack (J5). The USB-C connector provides a 5V supply to the VIN pin, which is connected to the internal 5V regulator (U2). The power jack provides a 5V supply to the VIN pin, which is connected to the internal 5V regulator (U2).

The 5V supply is regulated to 3.3V by the 3.3V regulator (U5) and is connected to the 3V3 pin. The 3.3V supply is also connected to the 3V3 pin of the USB-C connector (J1).

The 3.3V supply is also connected to the 3V3 pin of the power jack (J5).

The 3.3V supply is also connected to the 3V3 pin of the IOREF pin header.

33.1

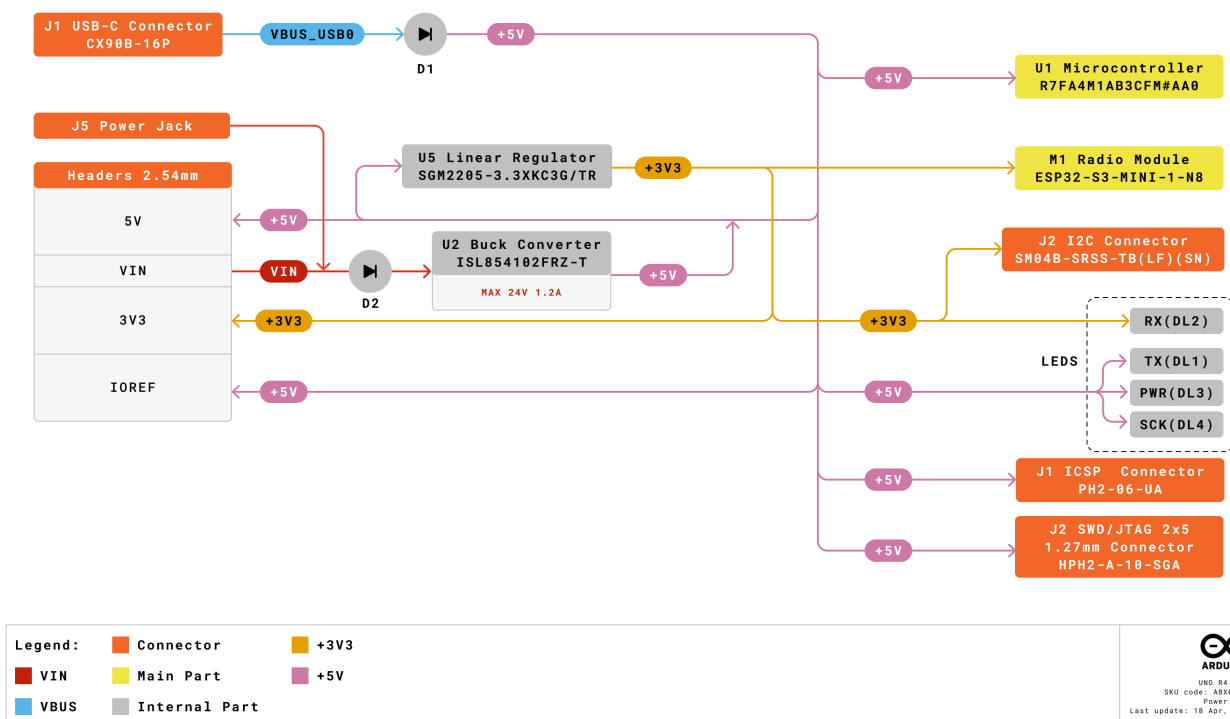

Arduino UNO R4 WiFi



33.2


UNO R4 WiFi 5V ESP32-S3 3.3V

ESP32-S3 3.3 V RA4M1 5V

33.3

R7FA4M1AB3CFM#AA0 GPIO 8mA GPIO

34

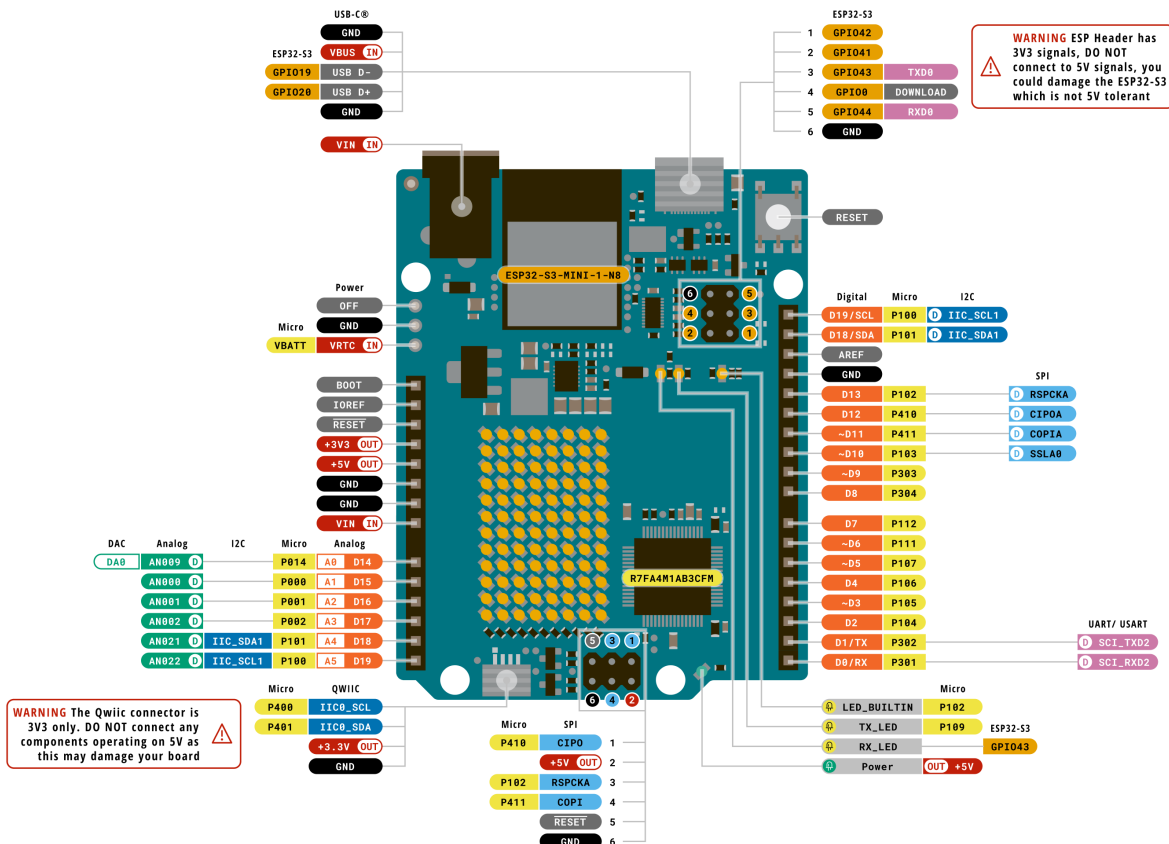

Legend:	■ Digital	■ I2C	■ Other SERIAL
■ Power	■ Analog	■ SPI	■ Analog
■ Ground	■ Main Part	■ UART/USART	■ PWM/Timer



UNO R4 WiFi
 SKU code: ABX00087
 Pinout
 Last update: 30 Jun, 2023

UNO R4 WiFi

34.1

Pin	Label	Function	Description
1	BOOT	NC	Boot pin
2	IOREF	IOREF	IOREF pin (V - 5 V)
3	Reset	Reset	Reset pin
4	+3V3	3V3	+3V3 pin
5	+5V	5V	+5V pin
6	GND	GND	GND pin
7	GND	GND	GND pin
8	VIN	VIN	VIN pin
9	A0	AIN0	AIN0 / DAC
10	A1	AIN1	AIN1 / OPAMP+
11	A2	AIN2	AIN2 / OPAMP-
12	A3	AIN3	AIN3 / OPAMPOut
13	A4	AIN4	AIN4 / I2C SDA
14	A5	AIN5	AIN5 / I2C SCL

34.2

Pin	Label	Function	Description
1	SCL	SCL	I2C SCL
2	SDA	SDA	I2C SDA
3	AREF	AREF	AREF pin
4	GND	GND	GND pin
5	D13/SCK/CANRX0	D13	GPIO 13 / SPI SCK / CAN RX
6	D12/CIPO	D12	GPIO 12 / SPI CIPO
7	D11/COPI	D11	GPIO 11 / PWM / SPI COPI
8	D10/CS/CANTX0	D10	GPIO 10 / PWM / SPI CS / CAN TX
9	D9	D9	GPIO 9 (PWM~)
10	D8	D8	GPIO 8
11	D7	D7	GPIO 7
12	D6	D6	GPIO 6 (PWM~)
13	D5	D5	GPIO 5 (PWM~)
14	D4	D4	GPIO 4
15	D3	D3	GPIO 3 (PWM~) / TX0
16	D2	D2	GPIO 2 / TX0
17	D1/TX0	D1	GPIO 1 / TX0
18	D0/TX0	D0	GPIO 0 / TX0 (RX)




34.3

Pin	Function	Pin	Function
1	OFF	Pin	Function
2	GND	Pin	Function
1	VRTC	Pin	Function RTC Pin

34.4 ICSP

Pin	Function	Pin	Function
1	CIPO	Pin	Function
2	+5V	Pin	5V Pin
3	SCK	Pin	Function
4	COPI	Pin	Function
5	RESET	Pin	Function
6	GND	Pin	Function

35

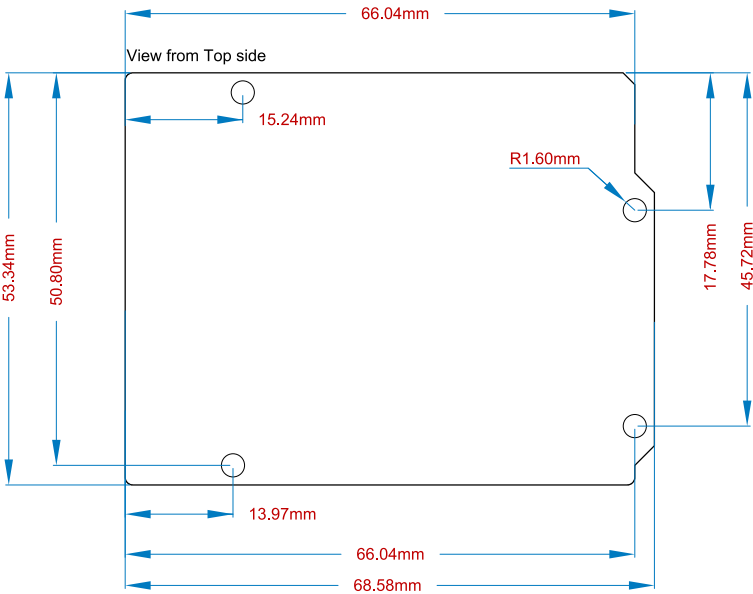

Arduino UNO R4 WiFi Mechanical Drawing



36

36.1 - IDE

Arduino® UNO R4 WiFiのインストールとArduino® Desktop IDE **[1]**のインストール、Arduino® UNO R4 WiFiのインストール、Type-C® USBのインストール、LED (DL1) のインストール

36.2 - Arduino Web Editor

Arduino® Web EditorのインストールとArduino® Web Editor **[2]**のインストール

Arduino Web EditorのインストールとArduino Web Editor **[3]**のインストール

36.3 - Arduino Cloud

Arduino CloudのインストールとArduino IoTのインストール

36.4

Arduino Project Hub **[4]**、Arduino Library Reference **[5]**、**[6]**のインストール

36.5

ArduinoのインストールとUSBのインストール、USBのインストール

37 CE DoC EU

EUのインストールとEEAのインストール

38

Arduino 2011/65/EU 2015/604 RoHS 3 2015/863/EU

項目	濃度(ppm)
Pb	1000
Cd	100
Hg	1000
Cr6+	1000
PBB	1000
PBDE	1000
DEHP	1000
BBP	1000
DBP	1000
DIBP	1000

0000000000

Arduino (EC) 1907 /2006 (REACH) SVHCs
(<https://echa.europa.eu/web/guest/candidate-list-table>) 0.1%
"REACH XIV ECHA 1907 /2006/EC XVII
(SVHC)

39

Arduino-1502Arduino
Arduino
Arduino

□ □

000000 FCC 000 15 0000000000000000000000000000

- FCC□□□□□□□□

1. 00000000000000000000000000000000
2. 00000000000000000000000000000000
3. 00000000000000000000000000000000 20 000

[illegible]

- □□□□□□□□□□
- □□□□□□□□□□
- □□□□□□□□□□□□□□□□
- □□□□□□□□□□/□□□□□□□□□□

English: User manuals for licence-exempt radio apparatus shall contain the following or equivalent notice in a conspicuous location in the user manual or alternatively on the device or both. This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

French: Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

IC SAR ☐ ☐ ☐

English This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body.

French Lors de l'installation et de l'exploitation de ce dispositif, la distance entre le radiateur et le corps est d'au moins 20 cm.

□□□□ EUT□□□□□□□□85°C□□□□□□-40°C□

Arduino S.r.l. 2014/53/EU



41 SRRC

CMIIIT ID: 2022DP6085

42

Arduino SRL	
Via Andrea Appiani, 25 - 20900 MONZA (Italy)	

43

Ref	Link
Arduino IDE (Desktop)	https://www.arduino.cc/en/Main/Software
Arduino IDE (Cloud)	https://create.arduino.cc/editor
Cloud IDE Getting Started	https://docs.arduino.cc/cloud/web-editor/tutorials/getting-started/getting-started-web-editor
Project Hub	https://create.arduino.cc/projecthub?by=part&part_id=11332&sort=trending
Library Reference	https://github.com/arduino-libraries/
Online Store	https://store.arduino.cc/

44

	** **	
19/09/2023	4	FCC
25/07/2023	3	
30/06/2023	2	
08/06/2023	1	